



PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

Procure Trolley Instructions



Box content: -

- 2 x Wheels (with brakes)
- 2 x Wheels
- 1 x Large 15mm Spanner
- 1 x Small 8mm Spanner
- 1 x Allen Key
- 4 x Spring Washers (To be used with Wheels)
- 4 x 5mm Locking Nuts
- 4 x Flat Washers
- 4 x 16mm Bolts
- 1 x Curved Metal Frame
- 1 x Black Bin
- 3 x Procure Black Bowls
- 3 x Procure Tint Brushes
- 1 x Non-slip Heat Resistant Matt
- 1 x Pink Dry Wipe Pen
- 1 x Acrylic Bowl Shelf
- 1 x Acrylic Bin Shelf
- 1 x Grey Base Board



PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

Instructions

1. Carefully remove all parts from packaging
2. Gently place covered frame top down, so wider base is facing upwards



3. Peel off protective cover for acrylic bin shelf (both sides)





PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com


4. Place the Acrylic Bin Shelf over the legs



5. Place the grey base board on top of the Acrylic Bin Shelf



6. Slide one spring washers to each wheel

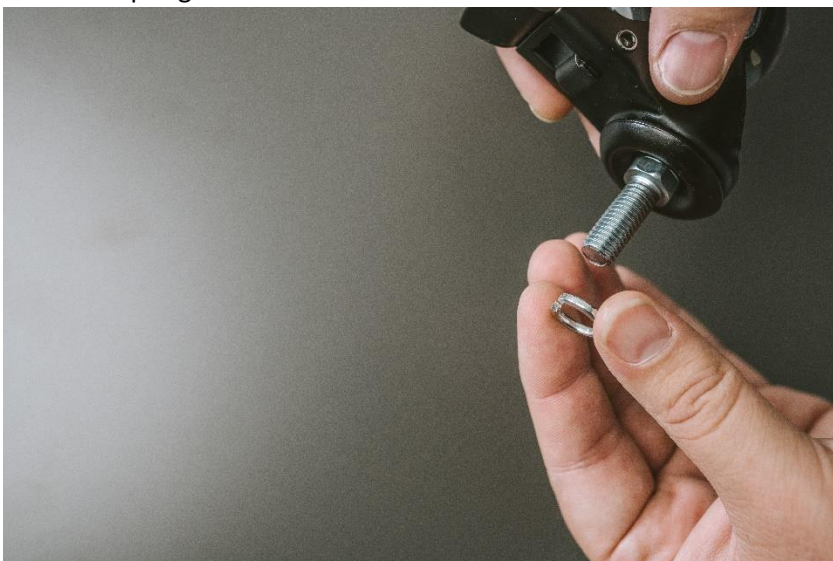



PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

7. Hand screw each wheel in to each hole on grey base (brake wheels should be located next to each other)



8. Hand tighten wheels using large 15mm Spanner at $\frac{1}{4}$ of a turn (**DO NOT OVER TIGHTEN – WHEEL SHOULD SPIN FREELY**)





PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

9. Turn the trolley on to its wheels and lock them in to place with brake to finish installation.



10. Peel off protective cover for acrylic bowl shelf (both sides)





PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

11. Align the pre drilled holes making sure the counter sunk (indent) is facing up.
 - a. Make sure the bowls are in line with the etched logo and front facing





PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

12. Insert the 16mm bolt through the hole, making sure it fits all the way through



13. Add flat washer to underside of screw and hand tighten 5mm locking nut with washer





PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

14. Use 8mm spanner to hold the bolt and use 3mm allen key to tighten the screw (**DO NOT OVER TIGHTEN**)



15. Add bin, bowls, matt and brushes to complete your trolley.



16. Dry wipe pen to be used on acrylic shelf **ONLY** and wiped with a damp cloth when finished being used



PROCARE®

freedom to create

tel: +44 (0)117 965 0616

fax: +44 (0)117 958 4884

email: sales@hairfoil.com

www.hairfoil.com

